

2.4G Wireless Mode

For scanner with 2.4G wireless function. Wireless 2.4G mode supports windows, Mac OS, Linux, Unix, Android and other systems through dongle. The device needs to be disconnected from the USB connection during the pairing process.

Step 1: Scan **2.4G Wireless Mode** barcode. Scanner will pair with previous dongle by default.

Step 2: Scan **Enter Pairing Status** barcode. The indicator light will flicker.

Step 3: Plug in the dongle with the host device (within 15 seconds). If pair successfully, you will hear a beep and the indicator light is always on.



2.4G wireless Mode



Enter Pairing Status

Bluetooth HID Mode

For scanner with Bluetooth function. Bluetooth HID mode is compatible with Windows, MAC, OS, IOS, Android operating systems. The device needs to be disconnected from the USB connection during the pairing process.

Step 1: Scan **Bluetooth HID Mode** barcode. The scanner will pair with previous host by default.

Step 2: Scan **Enter Pairing Status** barcode. The barcode scanner indicator light flashes rapidly, enter the Bluetooth HID pairing state.

Step 3: Within 60 seconds, search for and select the Bluetooth device **Scanner HID** on the host device. If pair successfully, you will hear a beep and indicator light flashes.



Bluetooth HID Mode



Enter Pairing Status

Bluetooth SPP/BLE Mode

For scanner with Bluetooth function. Wireless Bluetooth SPP/BLE Mode are compatible with Windows, MAC OS, IOS, Android operating systems. The device needs to be disconnected from the USB connection during the pairing process.

Step 1: Scan **Bluetooth SPP Mode** or **Bluetooth BLE Mode** barcode. The barcode scanner indicator light flashes rapidly. When setting the Bluetooth SPP or BLE mode, the barcode reader will automatically enter the broadcast state.

Step 2: Search and select the Bluetooth device **Scanner SPP** or **Scanner BLE** on the host device. If pair successfully, you will hear a beep and the indicator light is always on.



Bluetooth SPP Mode



Bluetooth BLE Mode

Common Settings

System Settings




Restore Factory Settings



Version Number

Batch Mode

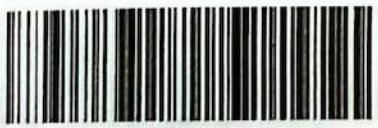


Storage Mode



Real Time Mode


Storage Mode

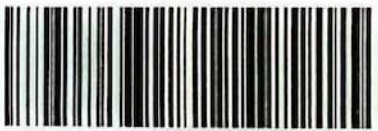

Total Stored Amount



Transmit All Stored Barcodes

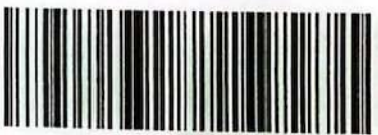

Clean Stored Barcodes

Vibration (Optional)



Vibration Off



Vibration On

Terminator Suffix



<Data><CR>



<Data><LF>



<Data><CR,LF>



<Data><HT>



<Data><ETX>



No Terminator Suffix

Time-out Setting



Enable Time-out



No Time-out



Time-out Immediately



Time-out After 1min



Time-out After 5min



Time-out After 10min


Country Keyboard Layout




English (US)




English (UK)

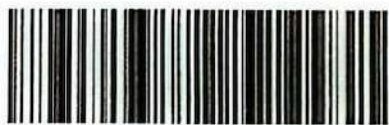

French (France)

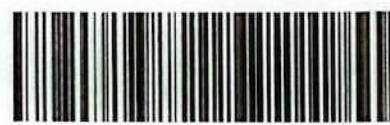


French (Belgium)

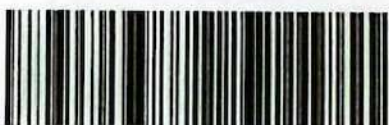

Portuguese (Portugal)



Portuguese (Brazil)

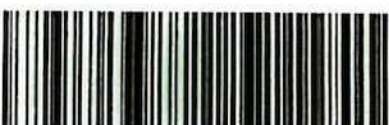

German (Austria)



German (Switzerland)



Spanish (Brazil)



Spanish (Spain)



Turkish F



Turkish Q



Italian (Italy)



Japanese (Japan)

※ For additional information on using the scanner, please contact the vendor for a complete user manual.

Troubleshooting

Serial number	Problem	Possible causes	Solution
1	Correctly install interface data cable, but not start	Scanner no power	Make sure the host is powered on and on. When using the USB interface, please connect the USB interface of the host computer. Do not use the extended USB interface and other USB extension lines
		Incorrect connection of interface data cable	Please check if the data cable connection is plugged in.
2	Scanner does not decode barcodes	This type of symbology is not enabled	Enable the symbology by scanning setting barcode
		The Barcode is defaced	Scan other barcodes of the same barcode type
		The distance between scanner and barcode is not appropriate	Move scanner closer to or further from barcode
		Scanner height is not enough to cover barcode completely	Align bar code to read code after reading
3	Host displays scanned data incorrectly	Host Input method is not matching	Set up English keyboard on host
		Other settings have been made to the scanner	Restore the scanner parameters to the factory settings or contact your barcode scanner vendor
4	Host displays scanned data incorrectly	The scanner's keyboard language is not same as the host keyboard language	Make sure that the PC or smartphone keyboard language is the same as barcode scanner language
5	Scanner is not reading any barcode	Device conversion error	Restart the scanner and restore it to factory default