

## 5、 SET DEFAULTS

---

Setting Sequence



RETURN TO FACTORY DEFAULTS


Note: Restore default settings won't change product interface setting. For example, When a scanner is set up as USB Interface, It will still be USB interface after returning default settings.

## 6、 SET UP INTERFACE

---



USB-HID (Default)

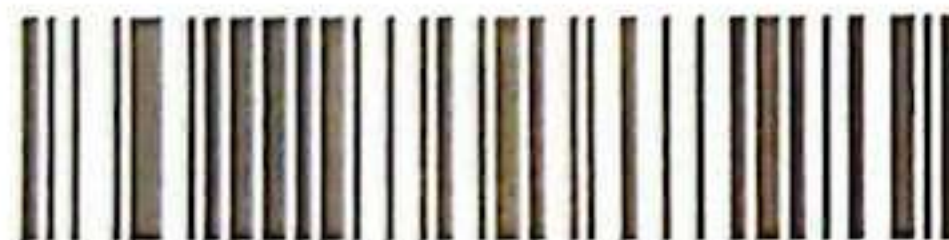


USB MAC keyboard



Serial port

Scan the barcode to configure scanner as RS232 Port.

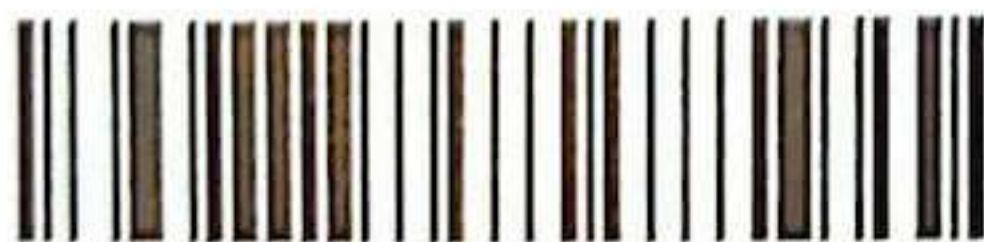

USB - Virtual RS232 Mode

Scan the barcode above to configure the USB -Virtual RS232 Port.(Please contact seller for driver.)

## 7、 Scan Mode Setting

---



Trigger Mode (default)



Handsfree Mode

## 8、 Inverse Barcode

---

Inverse Barcode : Black ground and white bar code


Inverse Barcode




Normal barcode and Inverse bar code can be decoded after inverse bar code is enabled, but it will slow down the scanning speed. Inverse Barcode is disabled by default.



Only Decode Normal Barcode  
(default)

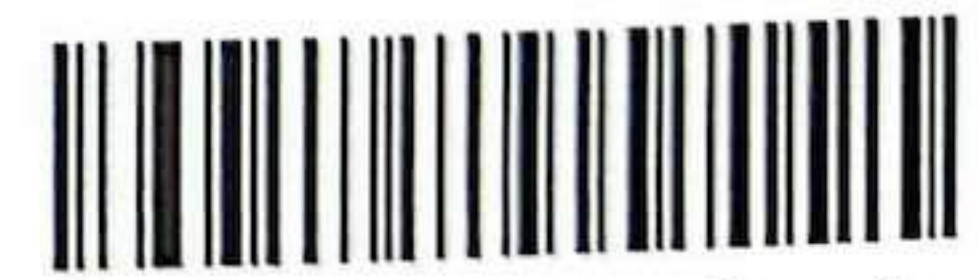


Only Decode Inverse Barcode

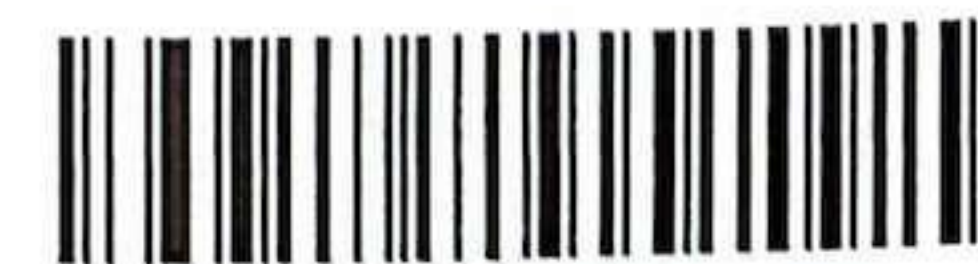

Decode Normal Barcode  
and Inverse Barcode

## 9、 Set Up Suffix

---

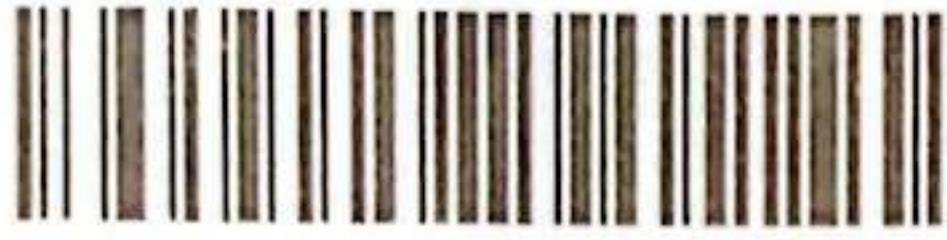

No Suffix




Set Suffix as Carriage Return



Set Suffix as Line Break



Set Suffix as Carriage Return  
and Line Break (default)

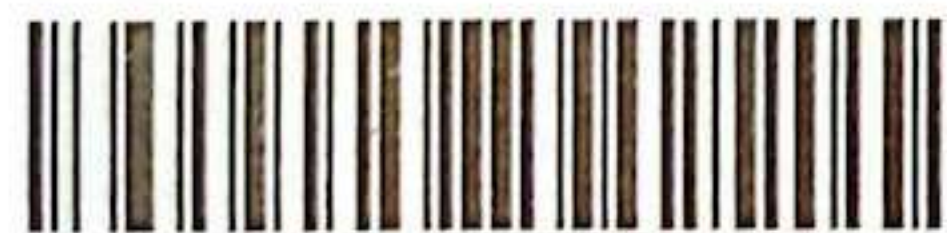


Set Suffix as TAB



Set Suffix as ETX

## Quick Start Guide

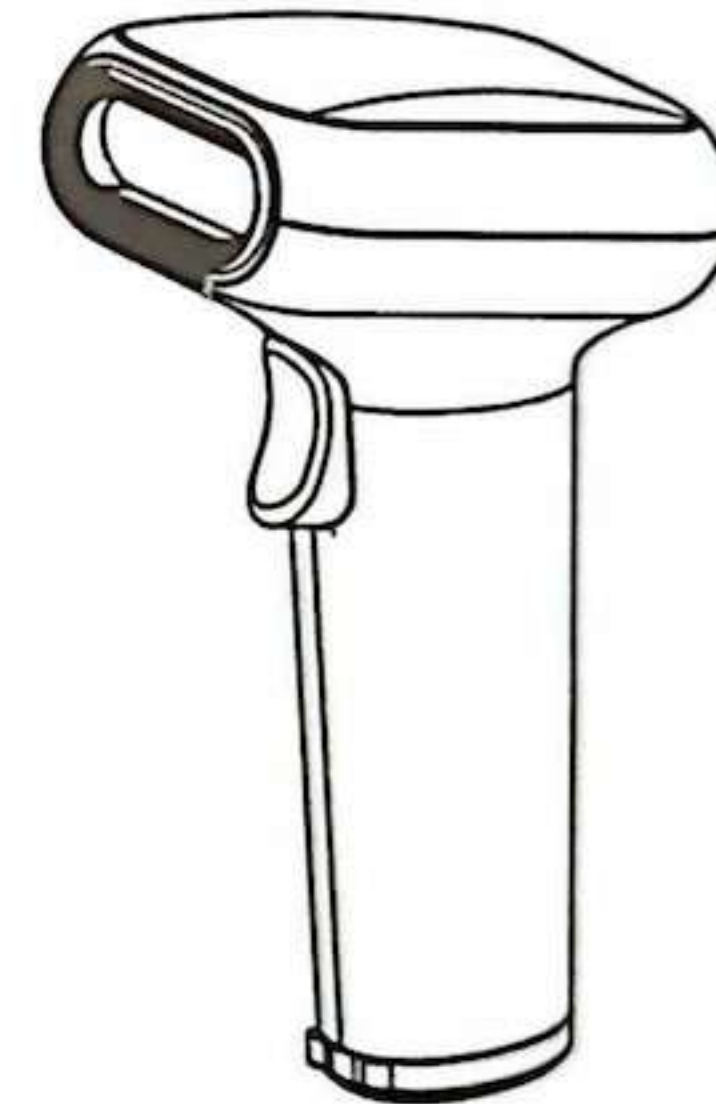

Dear users, thank you for choosing our products. we will provide you with quality products and caring services.