

System Settings



Restore Wireless Defaults



Version

Data Format




Codepage




Unicode(UTF-8)

Note: This product supports wireless 2.4G receiver and wired USB interface to directly output Codepage or Unicode encoding

Data Transfer Mode

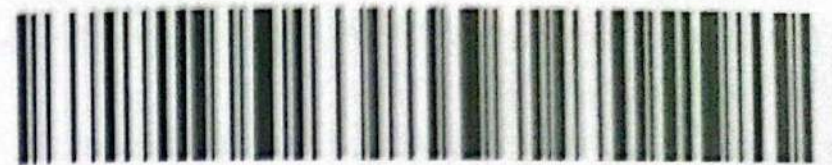

Synchronous Mode*

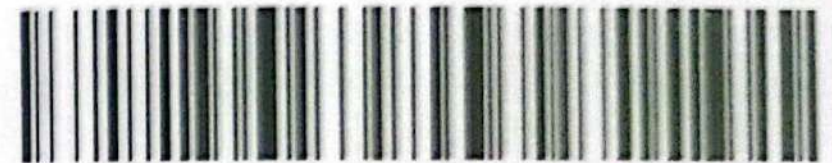

Storage Mode


Data Control



Upload All Data



Total Data Uploaded

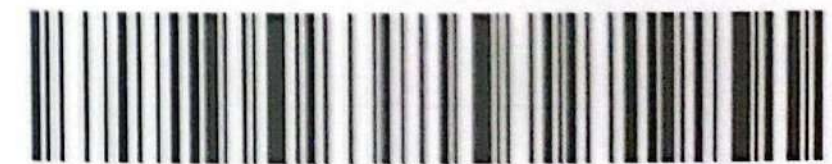

Clear All Data

Wireless 2.4G Pairing

Wireless 2.4G mode supports Windows, Mac OS, Linux, Unix, Android and other systems.

Step 1: Scan the "Wireless 2.4G Mode" setting code;

After the setting is completed, the receiver that has been paired last time will be prioritized by default.



Wireless 2.4G Mode

Step 2: Scan the "One-click Pairing" setting code;

The blue light of the bar code flashes quickly and enters the 2.4G pairing state.



One-click Pairing


Step 3: Plug the receiver into the host (within 1 minute), hear a "Di", and the blue LED2 stays on. The connection is paired successfully.

Bluetooth HID Pairing

Wireless Bluetooth HID supports Windows, Mac OS, IOS, Android and other systems.

Step 1: Scan the "Bluetooth HID Mode" .

After the setting is completed, the Bluetooth device that was paired last time is prioritized by default.

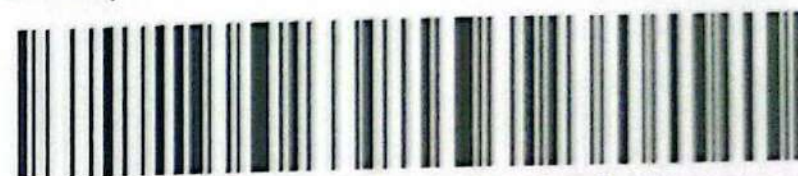

Bluetooth HID Mode

Step 2: Scan the "One-click pairing" setting code; The blue LED1 and blue LED2 of the scanner flash alternately and quickly, and enter the Bluetooth HID pairing state.



One-click pairing

Step 3: Turn on Bluetooth in the host device and search for the "BarCode Scanner HID" device, and then click on the device. Until you hear a "Di" , the Blue LED2 stays on. The connection is successfully paired.

Note: After pressing the key for 8 seconds, you can quickly enter the Bluetooth hid pairing status.

Bluetooth SPP/BLE Pairing

Wireless Bluetooth spp / ble supports using Bluetooth serial port to connect windows, Mac OS, IOS, Android and other systems.

Step 1: After scanning "Bluetooth SPP Mode", the blue LED2 flashes quickly. (Or after scanning "Bluetooth BLE Mode", the blue LED1 and LED2 flash quickly and synchronously.)



Bluetooth SPP Mode



Bluetooth BLE Mode

Step 2: Use the serial port transparent transmission tool on the host device, search for the device "BarCode Scanner SPP" or "BarCode Scanner BLE", and then click the device until you hear a "Di" and the blue LED2 is on. The connection is paired successfully.

Long press for 8 seconds

Press and hold for 8 seconds to enter the Bluetooth pairing status setting.



Enable



Disable

IOS HID virtual keyboard

When using Bluetooth HID mode to connect to the IOS, You can set a quick double-click to show or hide the IOS virtual keyboard.



Enable*



Disable

Bluetooth HID Transfer Rate



Fast



Medium*




Low



Ultra Low

Suffix Settings

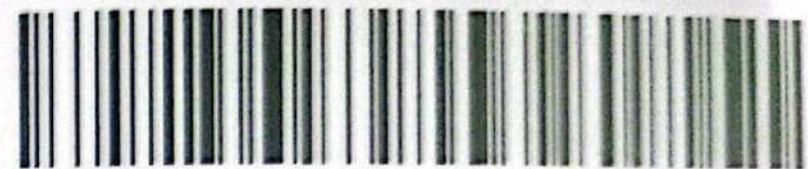

Add CR*



Add LF



Add CR+LF



Add Tab(HT)




NONE

Vibration Setting(optional)




Enable*

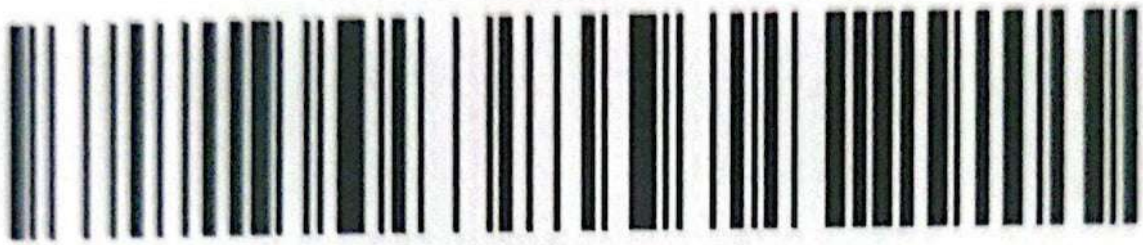


Disable


Sound Settings

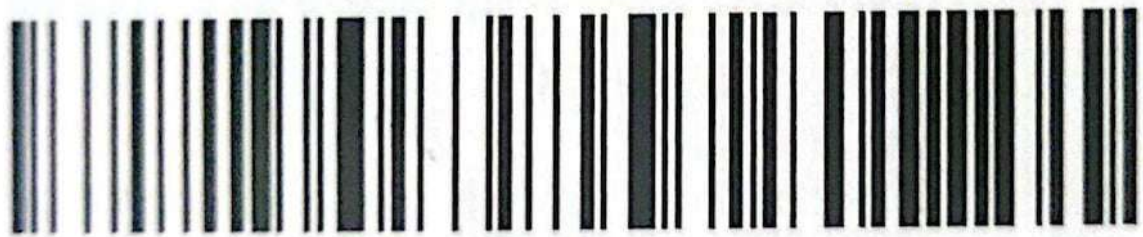

High*

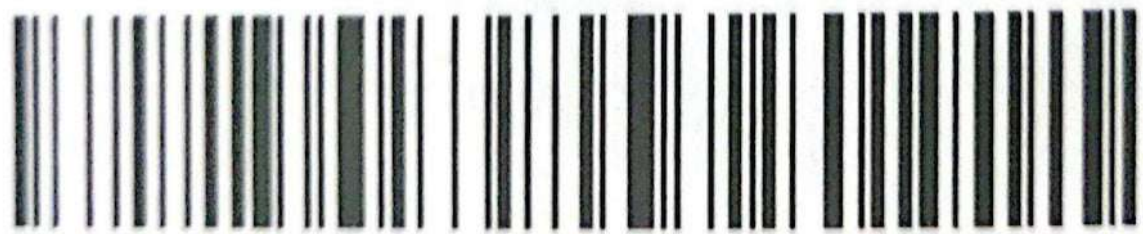

Low

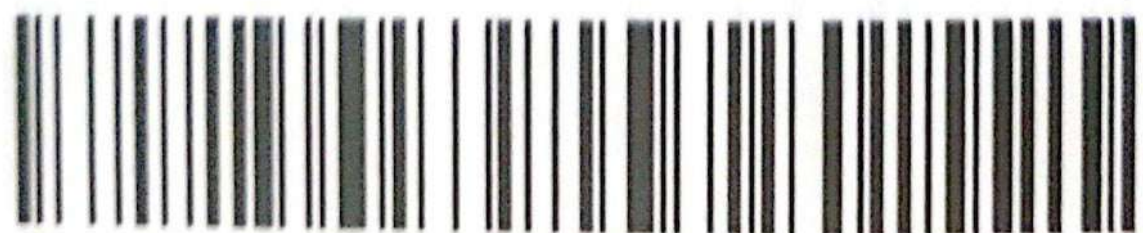

Disable

Sleep Time Settings



1 Minute



5 Minutes*



30 Minutes



Never Sleep



Sleep Now

Keyboard Language Settings



American English*



German



French



Spanish



Italian



Japanese



Portuguese



British English



Brazilian Portuguese



Russian




International Keyboard


Clear Screen Count (Optional)



Clock Function (Optional)

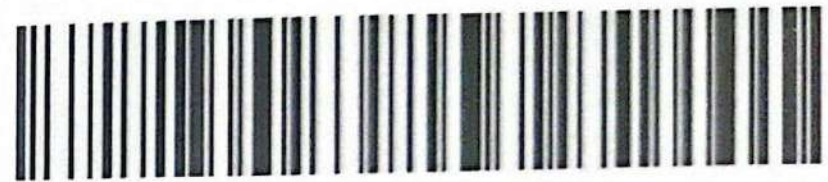

Current Time (On)

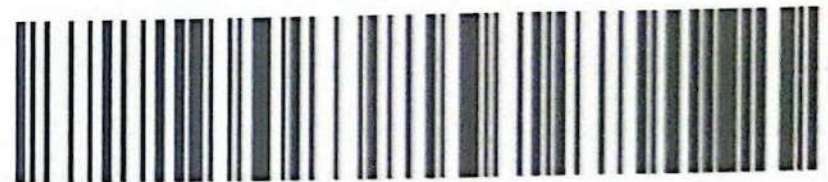

Before Barcode



After Barcode



Current Time (Off)

LED Indicator Description

Blue LED1 flashes once:

---The scanner decoded successfully.

Blue LED2 is on:

---Connection succeeded.

Red LED3 is on:

---Battery is being charged, full off.

Blue LED1 flashes quickly:

--- The scanner is in the 2.4G pairing state.

Blue LED2 flashes quickly:

--- The scanner is in Bluetooth SPP mode pairing state.

Blue LED1 and blue LED2 blink rapidly alternately:

--- The scanner is in Bluetooth HID mode pairing state.

Blue LED1 and blue LED2 flash quickly and synchronously:

--- The scanner is in the Bluetooth BLE mode pairing state.

Blue LED1 and blue LED2 flash slowly at the same time:

--- The scanner is in an upgraded state.

Matters Needing Attention

1. The Barcode Scanner is suggested to charge with USB 3.0 interface of computer (Figure A).
2. Please use Power Adapter with DC 5V 1A (Figure B).
3. DO NOT use Power Adapter which is greater than 5V 1A; DO NOT use fast charge to avoid damaging the Barcode Scanner.
4. The battery level is suggested to save 60% - 80% when not in use.
5. Please power off the Barcode Scanner when fully charged.

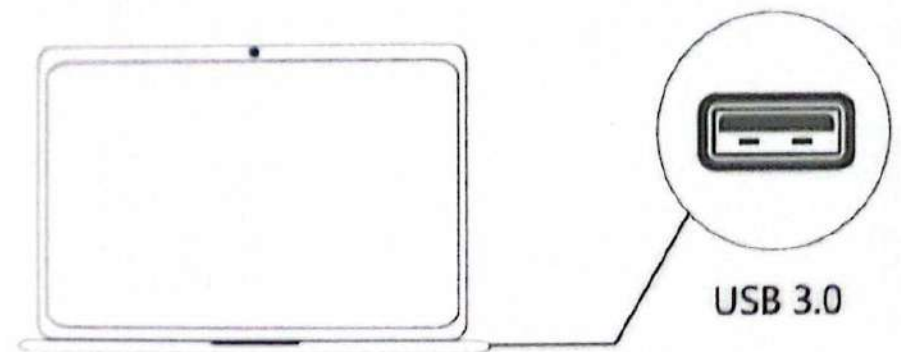


Figure A

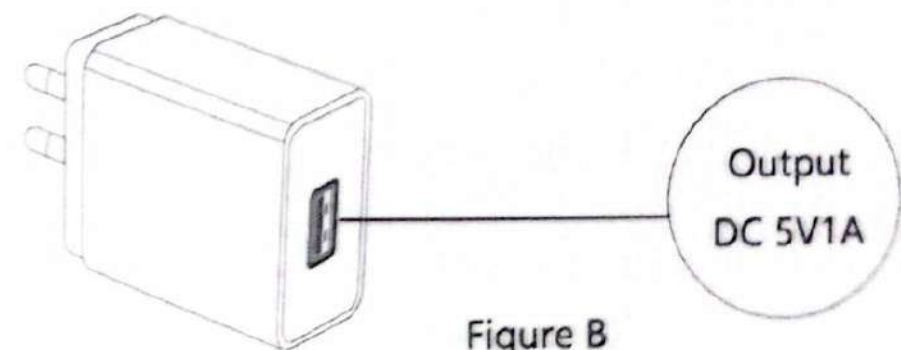


Figure B